


Remove a User Profile from a Managed Chromebook

Use this when a saved Chromebook profile needs to be removed before the user signs in again.

Wolf Creek Public Schools - Technology Services


1. Select the user

On the Chromebook sign-in screen, select the profile you want to remove.

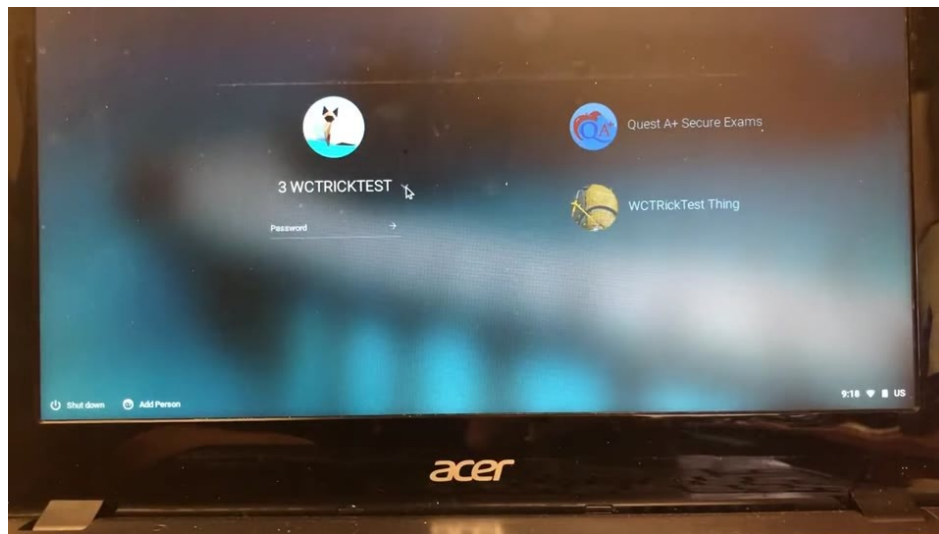


2. Open the profile menu

Select the small arrow beside the profile name to open the user options.

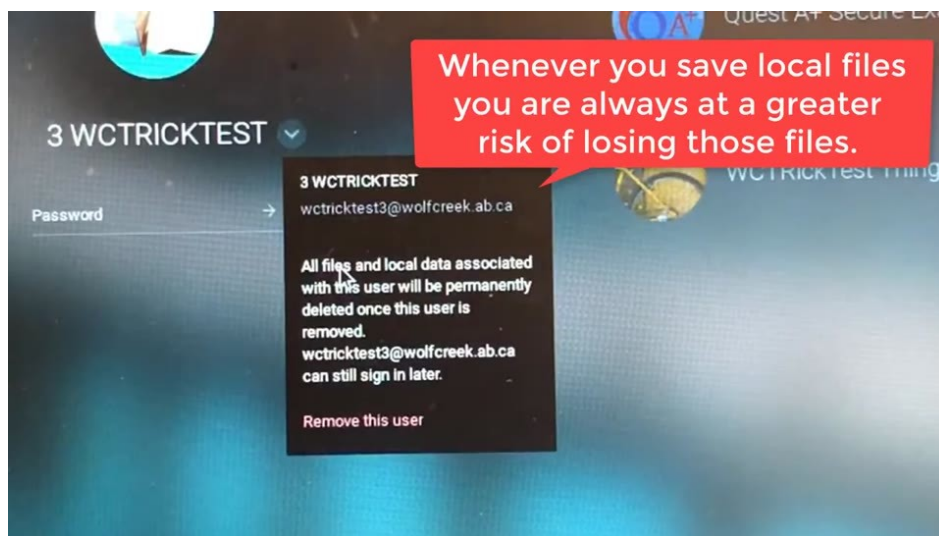

3. Choose Remove this user


Select Remove this user and confirm the removal.

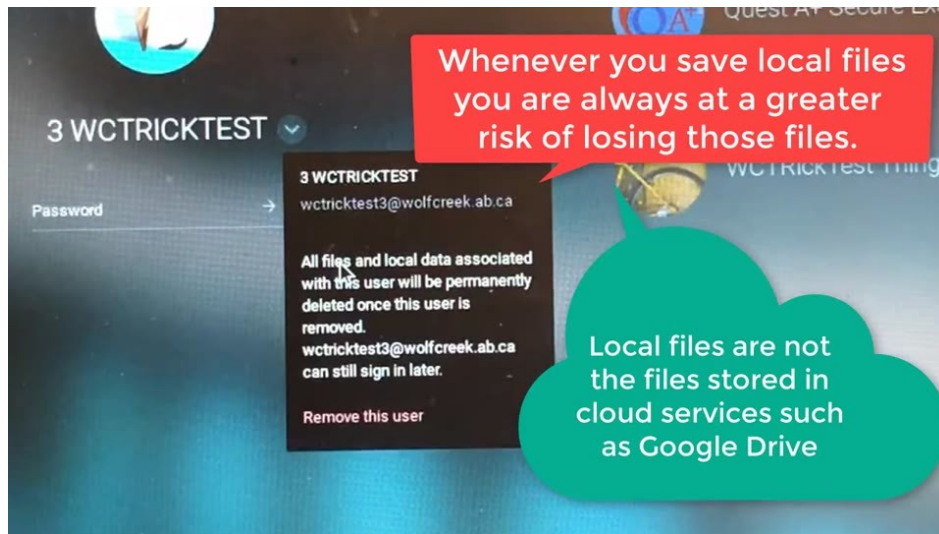

Note: Removing the profile permanently deletes files and local data stored only under that Chromebook profile. Files stored in cloud services such as Google Drive are not deleted.

4. Sign in again

After the profile is removed, add/sign in to the WCPS account again.

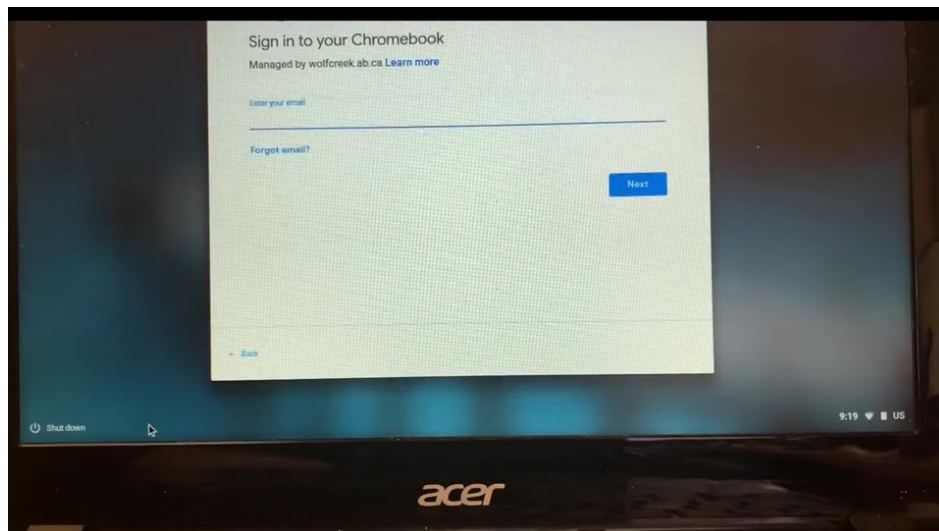

Need more help? Submit a Technology Services work order through Freshdesk.