


Require a Password After Sleep on an Unmanaged Chromebook

Change the lock/sleep setting if reopening the lid does not ask for a password.

Wolf Creek Public Schools - Technology Services


1. Open Settings

Open ChromeOS Settings.

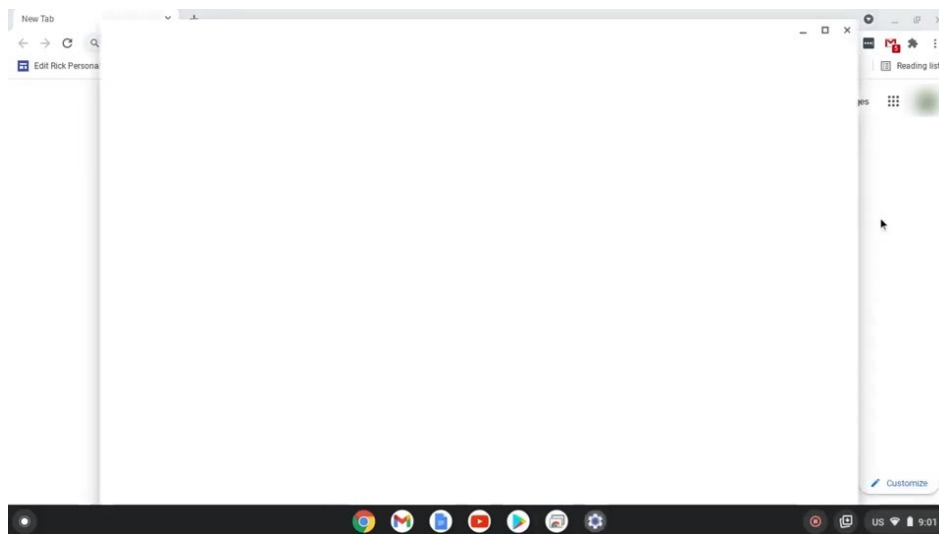


2. Find the lock setting

Open the Security and sign-in area and look for Show lock screen when waking from sleep.

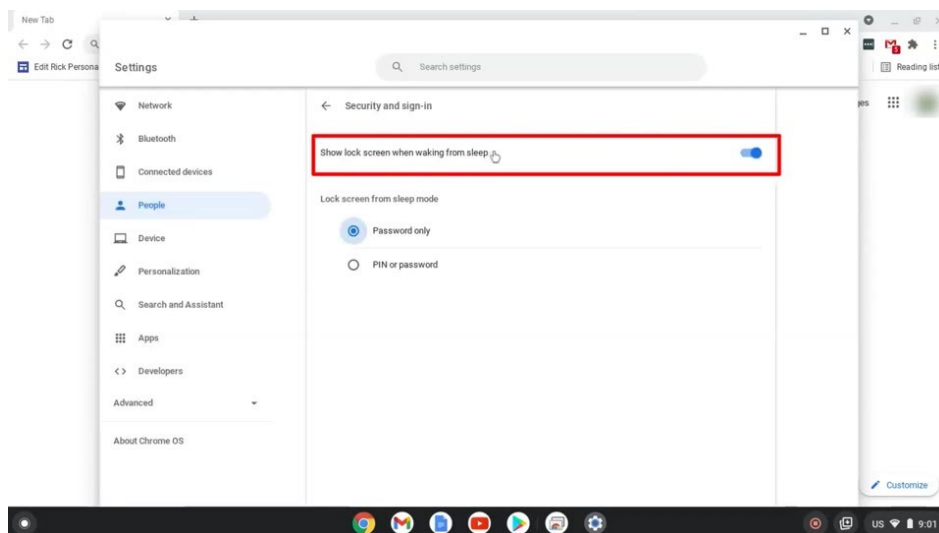


3. Turn on the lock screen

Enable Show lock screen when waking from sleep so the Chromebook asks for authentication after sleep.

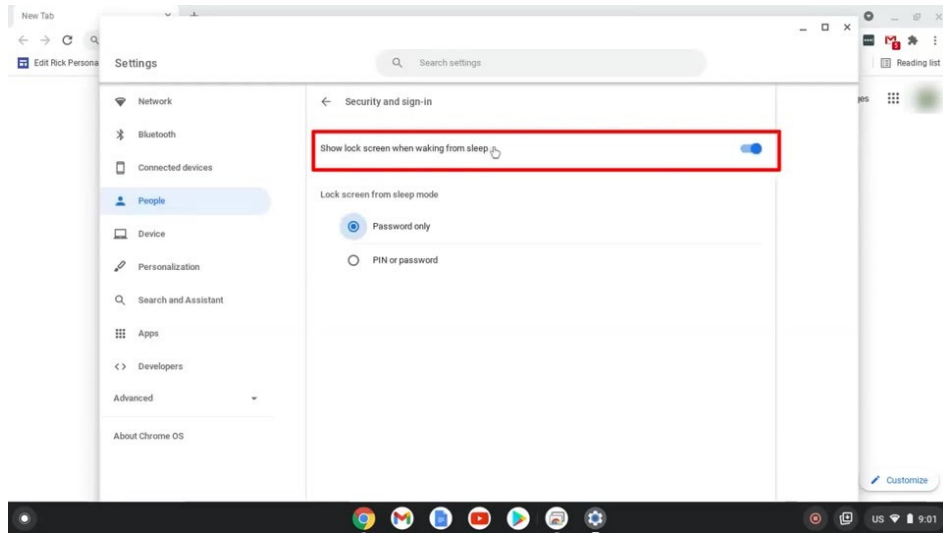

4. Check the power setting if needed

The video also shows the Power settings, including Sleep when cover is closed. Confirm this is enabled if you expect closing the lid to put the Chromebook to sleep.

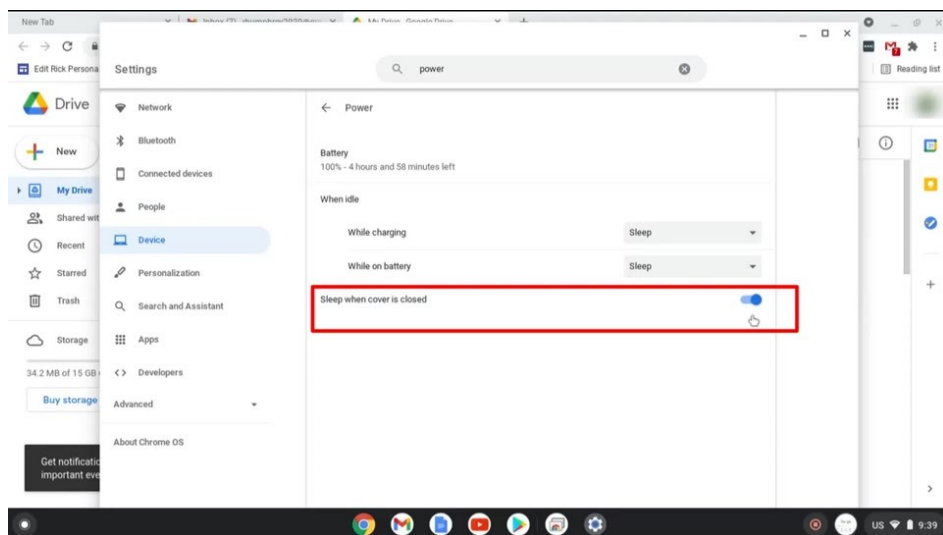

Note: This procedure is for an unmanaged Chromebook. On a WCPS-managed device, some settings may be controlled by the organization.

Need more help? Submit a Technology Services work order through Freshdesk.